

Phone: 800-669-1303 or 801-561-0303
Fax: 801-255-2312
e-mail: treborservice@idexcorp.com



MAXIM 50R PUMP

Operation / Maintenance Manual

SERIAL NUMBER (located on top of product):

PATENTS: U.S. 09642426, U.S. 06106246, U.S. 05971402, U.S. 05370507



10/01/2005 – MM50R-G

CONTENTS

| | | |
|----------|---|-----------|
| 1 | INSTALLATION..... | 3 |
| 1.1 | UNPACKING | 3 |
| 1.2 | UTILITIES / HOOK-UP | 3 |
| 1.3 | REMOTE EXHAUST HOOK-UP | 5 |
| 2 | OPTIONS | 6 |
| 2.1 | FLUID PORT CONNECTION OPTIONS..... | 6 |
| 2.2 | FLUID FITTINGS / SURGE SUPPRESSOR HOOK-UP | 6 |
| 2.3 | OPTIONAL LEAK SENSING | 7 |
| 2.3.a | Installation..... | 7 |
| 2.3.b | Sensor Signal Specifications | 7 |
| 3 | START-UP | 8 |
| 3.1 | PERFORMANCE CHARTS..... | 8 |
| 4 | MAINTENANCE..... | 9 |
| 4.1 | PREVENTIVE MAINTENANCE SCHEDULE..... | 10 |
| 4.1.a | Preventive Maintenance Record | 12 |
| 4.2 | RECOMMENDED SPARE PARTS | 13 |
| 4.3 | TOOLS..... | 13 |
| 4.4 | PARTS ILLUSTRATION..... | 14 |
| 4.5 | PARTS LIST | 15 |
| 4.6 | CLEAN-UP..... | 15 |
| 4.7 | DISASSEMBLY | 16 |
| 4.7.a | Body Disassembly | 17 |
| 4.7.b | Head Disassembly | 17 |
| 4.7.c | Control Base Disassembly | 17 |
| 4.7.d | Cleaning..... | 18 |
| 4.8 | ASSEMBLY | 18 |
| 4.8.a | Control Base Assembly | 18 |
| 4.8.b | Body Assembly | 19 |
| 4.8.c | Final Assembly | 20 |
| 4.9 | TESTING | 22 |
| 4.9.a | Performance Test | 22 |
| 4.9.b | Dry Pump..... | 22 |
| 4.9.c | Dry Suction | 22 |
| 5 | TROUBLESHOOTING..... | 23 |
| 6 | WARRANTY | 24 |
| 7 | CONTACT INFORMATION | 25 |
| 7.1 | GENERAL CONTACT INFORMATION..... | 25 |
| 7.2 | TECHNICAL SUPPORT | 25 |
| 7.3 | REGIONAL REPRESENTATIVES | 25 |

1 INSTALLATION

1.1 UNPACKING

After unpacking, the pump should be checked for any damage that may have occurred during shipment. Damage should be reported to the carrier immediately.

The following items should be included within the shipping container:

| <u>Qty</u> | <u>Item</u> | <u>Description</u> |
|------------|-------------|------------------------------|
| 1 | M50R | Maxim 50R Pump |
| 1 | MM50R | Operation/Maintenance Manual |

1.2 UTILITIES / HOOK-UP

It is recommended that the pump be positioned within 15° from level to maintain self-priming ability and pumping efficiency. Allow sufficient room for tubing connectors. The pump mounts on a quick-change base for easy installation.

The pump has an exhaust location on the backside of the base. The exhaust location requires 1/2" (12mm) minimum clearance behind the control base. Care should be taken to elevate the pump whenever possible to help prevent flooding these ports when the pump is located in a wet bench plenum. For remote exhaust connection see Section 1.3.

Air Inlet: 1/4" FNPT (3/8" Dia. [8mm] supply tube minimum).

Fluid Ports: Inlet/Outlet Fluid Fittings and Surge Suppressor require torqueing during pump installation. See Section 2 for hook-up diagram and torque values.

Air Supply: 20-60 psig (1.4 – 4.0 bar) clean dry air or nitrogen (See Performance Charts, Section 3.1.)

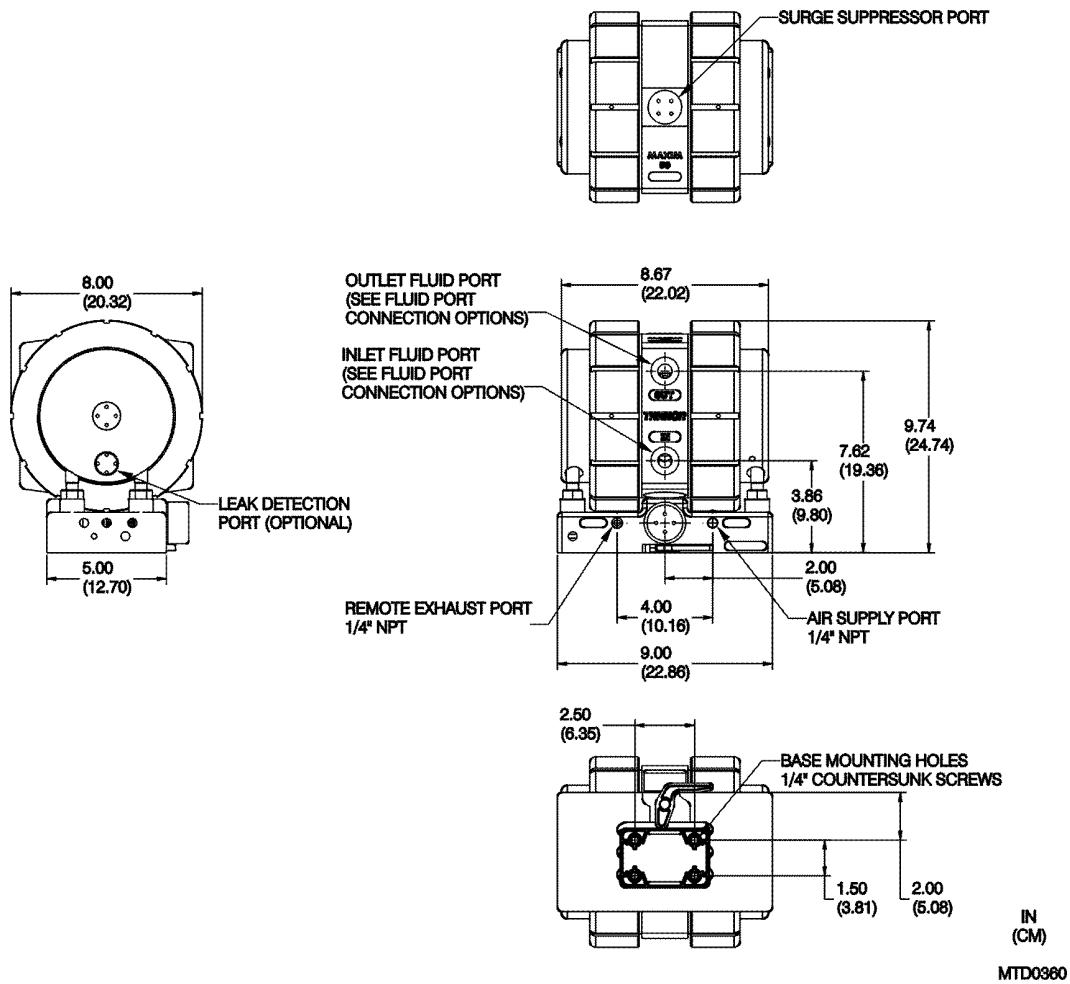


Figure 1-1

ATTENTION: The pump should be operated with clean, dry air or nitrogen. Particulate, water and oils in the air supply can damage the pump.

NOTE:


1. It is recommended that a filter be placed on the discharge side of the pump.
2. Although extensive efforts are made to deliver pumps to our customers completely dry, new pumps may contain residual moisture from their final DI water test.

Recommended Maximum Operating Levels: See Figure 3-2: Pressure vs. Fluid Temperature Chart

1.3 REMOTE EXHAUST HOOK-UP

- Remove existing Muffler Assembly from pump base.
- Install Exhaust Plug in Exhaust Port.
- Remove Pipe Plug (1/4" NPT) from the pump base. Install the appropriately sized fitting and tubing (not provided) to remote exhaust.

NOTE: To maintain optimum pump performance use 3/8" tubing minimum at a length of 10 ft. maximum.

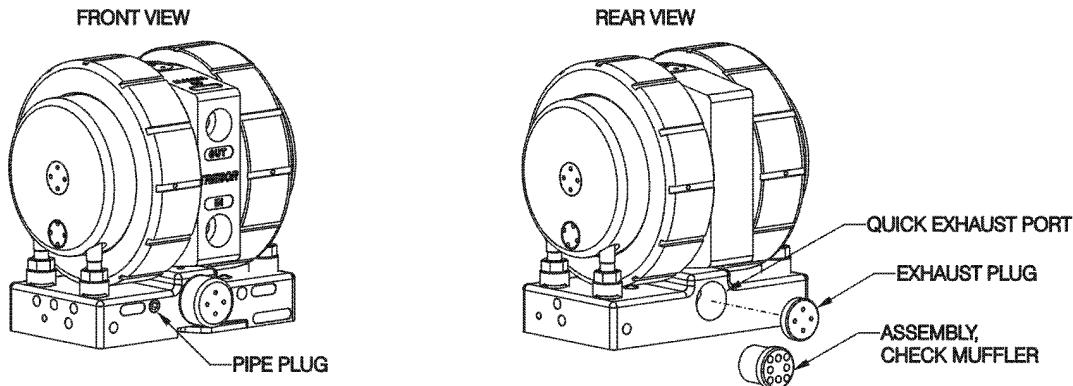

MTD0361

Figure 1-2

2 OPTIONS

2.1 FLUID PORT CONNECTION OPTIONS

NOTE: Use O-ring to seal stainless steel or other rigid plumbing.

Available Options

- A) PFA Weldable pipe.....1/2"
- B) Flare style tube adapter.....1/2", 3/4" and 1"
- C) PFA tube stub out.....3/4"
- D) NPT adapter nut.....3/4"

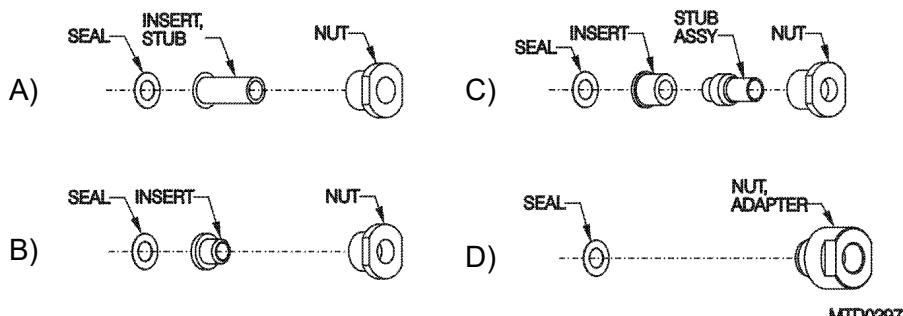


Figure 2-1

2.2 FLUID FITTINGS / SURGE SUPPRESSOR HOOK-UP

| <u>Surge Suppressor</u> | <u>Assembled Height: IN (CM)</u> |
|-------------------------|----------------------------------|
| SS85 | 17.12 (43.49) |
| SS95 | 13.97 (35.48) |

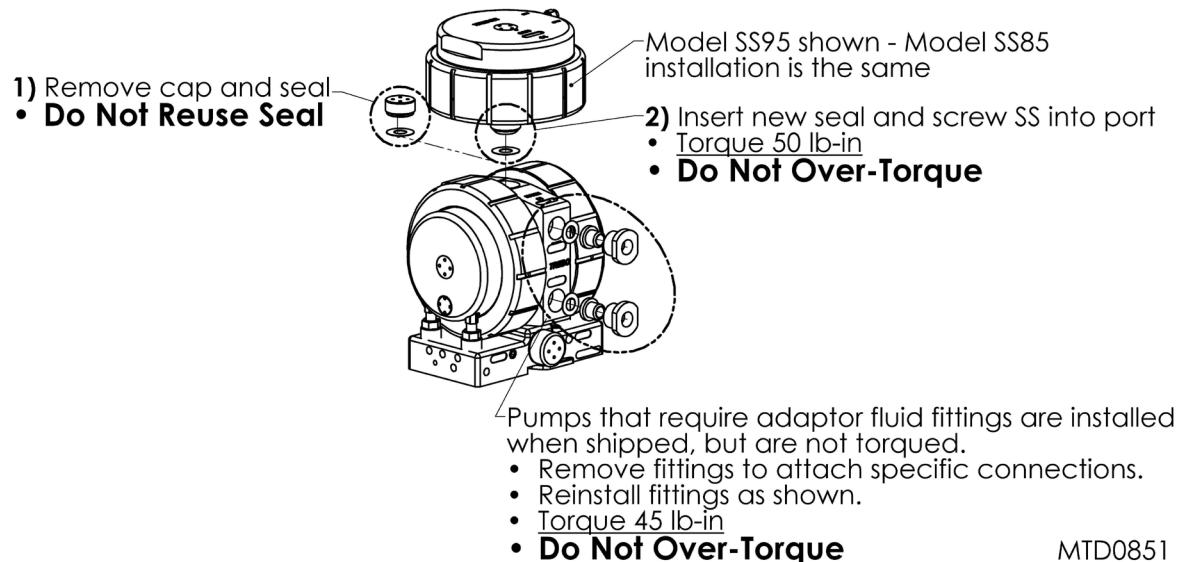


Figure 2-2

NOTE: See Surge Suppressor Operation Manual for detailed installation instructions.

2.3 OPTIONAL LEAK SENSING

2.3.a Installation

- Remove plug seal from port. Probe is self-sealing.
- Install probe assembly into leak sensor port.
- Thread probe cap into port. (NOTE: **Do not over tighten**; damage to threads will occur.)
- Push protective tubing into probe cap.
- Connect fiber optic cable to sensor (NOTE: Minimize bends in fiber optic cable to 2" radius minimum to help ensure optimum signal strength.) Fiber optic cable can be cut to desired length using the cable cutter provided.

2.3.b Sensor Signal Specifications

- The sensor signal is normally closed. In the event of a leak, no light signal is returned to the sensor.

NOTE: See your fiber optic sensor installation instructions for proper hook-up and adjustment.

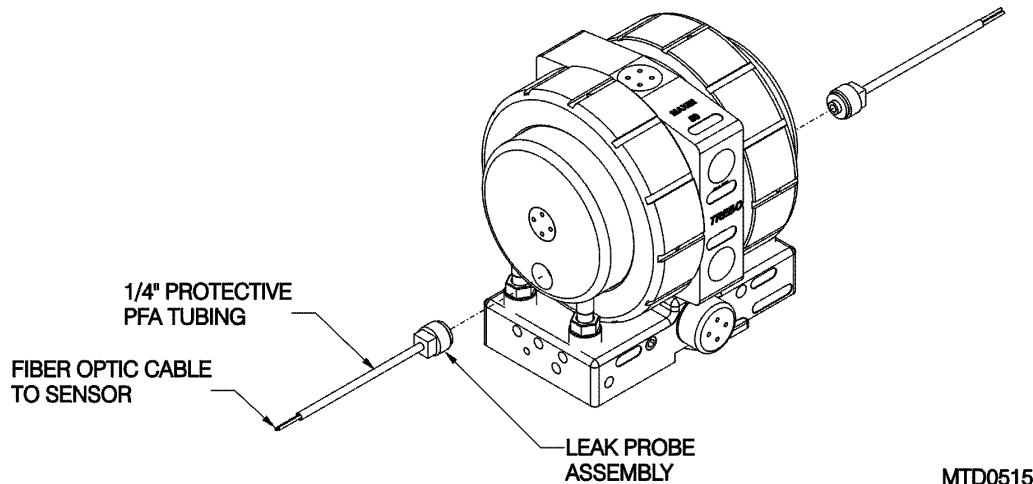


Figure 2-3

3 START-UP

- Pump air supply pressure must be regulated. (See Figure 3-2: Pressure vs. Fluid Temperature Chart)
- Open the fluid suction (IN) line valve, if necessary.
- Open the fluid discharge (OUT) line valve, if necessary.
- Start with air regulator at low (> 20 psi) pressure setting. Increase pressure to attain desired flow, up to the maximum rating (See Section 3.1).
- Table 1: Consumption / Efficiency can be used to determine approximate air consumption.
- Refer to Troubleshooting, Section 5, if pump fails to start.

ATTENTION: Prolonged periods (>5 minutes) of dry running can damage critical internal pump parts.



CAUTION: When handling potentially dangerous fluids under pressure, the pump and its fittings should be placed in an enclosure.


3.1 PERFORMANCE CHARTS

Pumping capacity is a function of air supply pressure and volume, suction head, suction line restrictions, discharge head, discharge line restriction, and fluid specific gravity and viscosity.

| Air Supply Pressure (PSIG) | Discharge Fluid Pressure (PSIG) | Air Used (SCFM) |
|----------------------------|---------------------------------|-----------------|
| 20 | 0 | 4.3 |
| 20 | 10 | 3.2 |
| 30 | 0 | 6.6 |
| 30 | 15 | 5.1 |
| 40 | 0 | 9.3 |
| 40 | 20 | 6.8 |
| 50 | 0 | 12.0 |
| 50 | 30 | 8.2 |
| 60 | 0 | 15.3 |
| 60 | 40 | 9.7 |

Table 1: Consumption / Efficiency


NOTE: Specification to be used to size regulators and control valves.

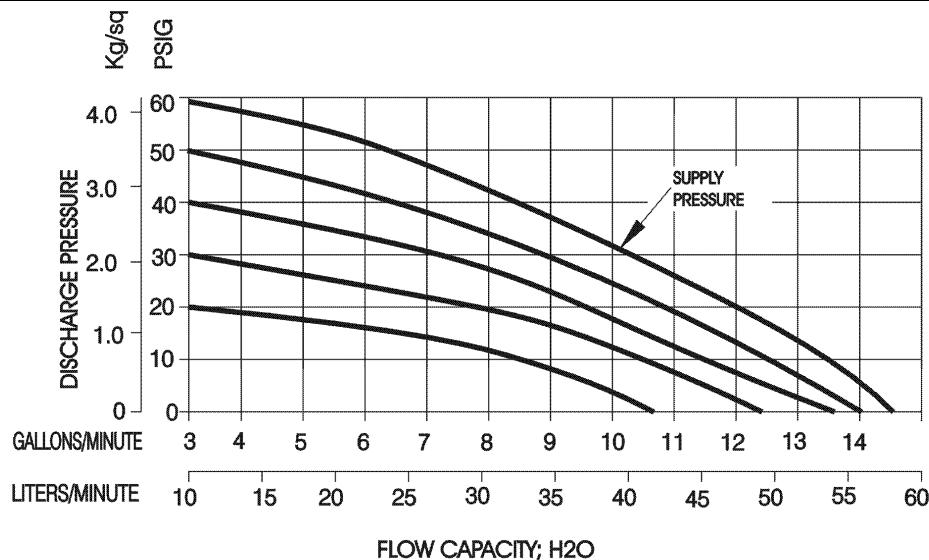

MTD0363

Figure 3-1: Pressure & Capacity Chart

NOTE: Test information is based on specific conditions and limited sampling.
Use for general reference only.

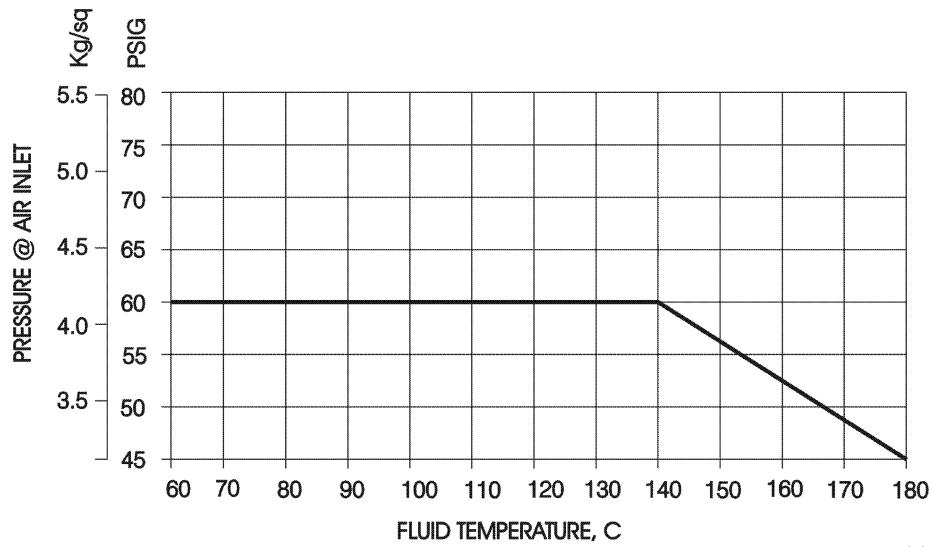

MTD0364

**Figure 3-2: Pressure vs. Fluid Temperature Chart
Recommended Maximum Pump Operating Levels**

NOTE:

1. This graph is not representative of all operating conditions - customer's specific application results may vary.
2. Be sure that fittings and tubing used are capable of these operating conditions.

4 MAINTENANCE

Trebور pump maintenance can be divided into two categories: air system maintenance and fluid system maintenance. The purpose of air system maintenance is to prevent air system failures such as stalling or erratic cycling. The purpose of fluid system maintenance is to maintain suction and lift capabilities.

Pump Rebuild Service

Trebور International provides a factory rebuild service for customers using Trebor products. Trebor will rebuild any standard pump (exclusive of options). Please contact Trebor International Sales Department for current rebuild pricing. The fixed rebuild price includes a factory rebuild and parts equivalent to the standard rebuild kit. Each factory rebuild comes with a new one-year warranty. Repairs requiring more extensive part replacements will be quoted prior to proceeding with the pump rebuild. If the pump has exceeded its useful life and cannot be rebuilt, the customer may elect to purchase a new Trebor pump. If the customer chooses not to rebuild or replace the pump, a \$150.00 evaluation charge will be required.

All returned pumps are to be shipped freight prepaid with a valid Purchase Order for the cost of rebuild service. Please contact Trebor International prior to returning your pump to obtain an RMA Number and Pump Return Data Sheet to ensure proper safety precautions. Each pump will be evaluated and repaired within 5 working days of the receipt of pump at Trebor facility.

4.1 PREVENTIVE MAINTENANCE SCHEDULE

The following maintenance schedule is recommended to optimize pump performance and minimize failures. Certain operating conditions that require more frequent maintenance intervals have been noted. In positive pressure inlet conditions where suction or lift is not required, fluid system maintenance may be extended.

Adhering to the recommended preventative maintenance schedule along with periodic inspection of the pump will ensure continued efficient operation and overall reliable pump performance.

It is recommended that the Preventive Maintenance Record (Section 4.1.a) be copied, maintained and kept with this unit for future reference.

MAXIM 50R Maintenance Schedule

| | Install | 30 Days | 3 Months | 6 Months | 9 Months | 12 Months | 15 Months | 18 Months | 21 Months | 24 Months |
|----------------------------------|---------|---------|----------|----------|----------|-----------|-----------|-----------|-----------|-----------|
| Poppet Pilot Valves and Seals | | | | | | | | | | |
| C-Ring and Detent Legs | | | | | | | | | R | |
| Muffler Media | | | | | | | | | R | |
| Shaft Seal and Shaft | | | | | | | | | R | |
| Check Balls and O-Rings | | | | | | | | | R | |
| Diaphragms | | | | | | | | | R | |
| Check Plug Seal | | | | | | | | | R | |
| Suction and Discharge Check Cage | | | | | | | | | I | |

I=Inspect, R=Replace

4.1.a Preventive Maintenance Record

Company Name: _____

Company Address: _____

Product: _____ Serial Number: _____

Date: _____ Tech: _____ Notes: _____

4.2 RECOMMENDED SPARE PARTS

KR50R-00-A Spares Rebuild Kit, which includes:

| <u>Part No</u> | <u>Qty</u> | <u>Description</u> | |
|----------------|------------|---------------------------|---------------------|
| KM50R-00-A | 1 | Maintenance Kit | |
| | | Includes: | |
| | | (2) AK018 | Pilot Seat |
| | | (2) AK020 | Pilot Poppet |
| | | (1) AK205 | Muffler Assembly |
| | | (1) L0145 | Detent Ring |
| | | (2) L0197 | Detent Leg |
| KD50-00-A | 1 | Diaphragm Kit | |
| | | Includes: | |
| | | (4) 1700C0047 | Diaphragm, Maxim 50 |
| | | (2) W0151 | Fiber Optic Target |
| 98001415 | 4 | Check Ball, PTFE | |
| 98002334 | 4 | O-ring, -312 PTFE | |
| 98003079 | 2 | Shaft Seal | |
| AK004 | 1 | Shaft, Maxim 50 | |
| AK153 | 2 | Check Cap Seal | |
| AM082 | 2 | Seal, Adapter port In/Out | |

In critical applications, a spare pump is recommended to minimize possible downtime during service intervals.

4.3 TOOLS

The following tool kit is recommended as standard service equipment.

KT50-00-B Tool Kit, which includes:


| <u>Part No</u> | <u>Qty</u> | <u>Description</u> |
|----------------|------------|--|
| 98003108 | 1 | Torque Wrench, 30-150 ft/lb., 1/2" Drive |
| 98003150 | 1 | Tool Case, w/Foam, M50 |
| 98003305 | 1 | Handle, Soc, 1/4" Drive |
| 98003306 | 1 | Wrench, Adj, 15/16" |
| T0126 | 1 | Tool, Shaft Insert |
| T0129 | 1 | Tool, Strap Wrench |
| T0132 | 1 | Rebuild Fixture |
| T0144 | 1 | Tool, Wedge, Head Removal, Cleaning Tool |
| T0146 | 1 | Tool, Pin, 3/4x1/4 Drive |
| T0147 | 1 | Tool, Pin, 1x1/4 Drive |
| T0148 | 1 | Tool, Pin, 1/2x1/4 Drive |
| T0149 | 1 | Tool, Pin, Optic Cap, 3/4 |
| T0171 | 1 | Tool, Wrench, Hex. 1/4" x 5-5/16" |

Optional:

T0203 1 Tool, Socket, Union Nut, M50
T0203-01 1 Tool, Socket, Union Nut, M50 (For pumps that are mounted to a base.)

4.4 PARTS ILLUSTRATION

BORDERS REPRESENT FLUID
CONTACT AREAS OF PUMP

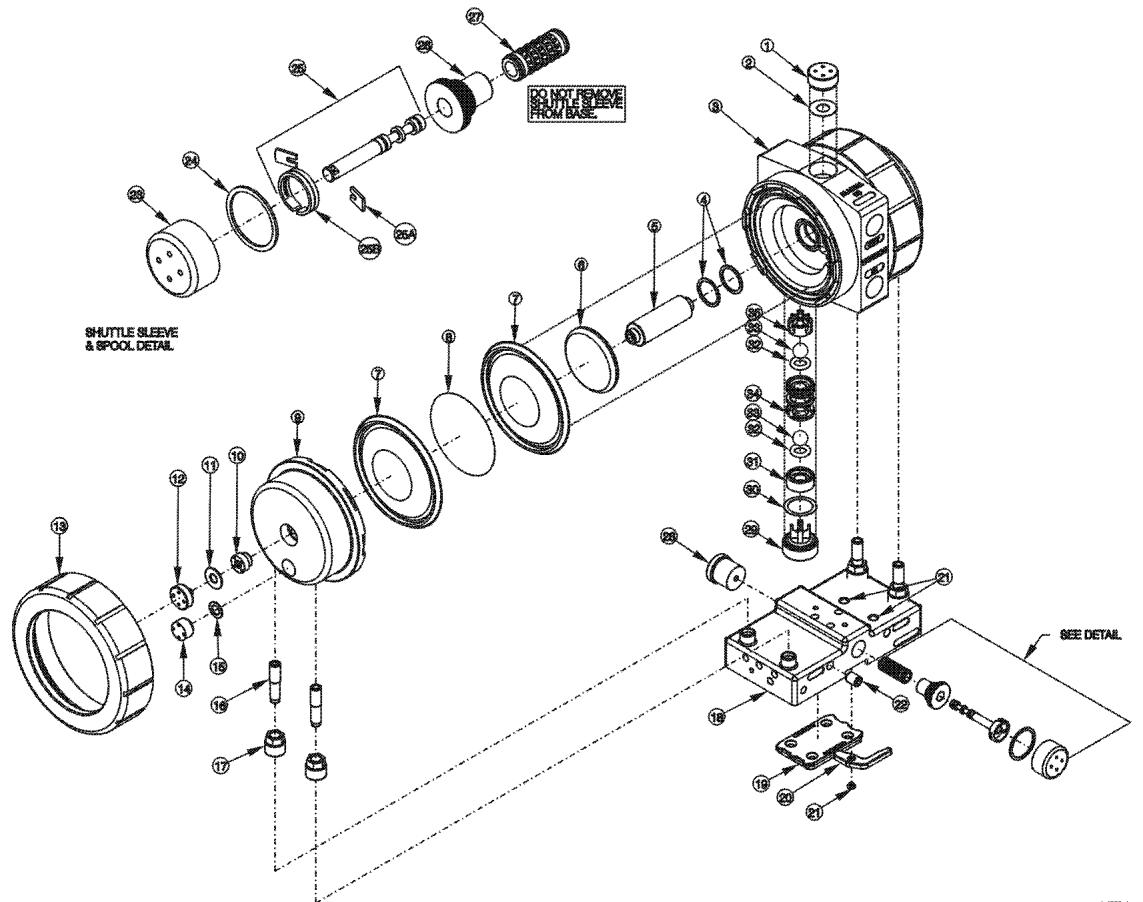

MTD0273

4.5 PARTS LIST

| ILL NO | PART NO | QTY | DESCRIPTION | PM YEAR # | MATERIAL |
|--------|-----------|-----|---------------------------|-----------|-----------------------------|
| 1 | AM075 | 1 | Damper Plug | | PTFE |
| 2 | AM084 | 1 | Surge Port Seal | | PTFE |
| 3 | AK065 | 1 | Body | | PTFE |
| 4 | 98003079 | 2 | Shaft Seal | 2 | PTFE |
| 5 | AK004 | 1 | Shaft | 2 | PFA |
| 6 | 1700B0041 | 2 | Push Plate | | PTFE |
| 7 | 1700C0047 | 4 | Diaphragm | 2 | PTFE |
| 8 | W0151 | 2 | Fiber Optic Target | 2 | PTFE |
| 9 | AK124 | 2 | Head | | PTFE |
| 10 | AK018 | 2 | Pilot Seat | 1 & 2 | PFA, PTFE |
| 11 | AK030 | 2 | Pilot Cap Seal | | PTFE |
| 12 | AK008 | 2 | Pilot Cap | | PTFE |
| 13 | AK003-01 | 2 | Union Nut | | PVDF (PP optional) |
| 14 | AM035 | 2 | Leak Port Plug | | PTFE |
| 15 | AM037 | 2 | Leak Port Seal | | PTFE |
| 16 | AK182 | 4 | Transfer Tube | | PFA |
| 17 | 98003277 | 4 | Transfer Tube Nut | | PP |
| 18 | AK076 | 1 | Control Base | | PP |
| 19 | AK088 | 1 | Mounting Base | | PP |
| 20 | AK108 | 1 | Locking Lever | | PP |
| 21 | 98003071 | 3 | Screw, PP | | PP |
| 22 | 98003080 | 2 | 1/4 NPT Fitting | | PP |
| 23 | L0104 | 1 | Detent Cap | | PP |
| 24 | L0113 | 1 | Detent Cap Seal | | PTFE |
| 25 | L0131 | 1 | Spool Assembly, High Load | | Ceramic, PEEK, Torlon |
| 25a | L0197 | 2 | Detent Leg | 1 & 2 | Torlon |
| 25b | L0145 | 1 | Detent Ring | 1 & 2 | PEEK |
| 26 | L0105 | 1 | Detent Adapter | | PP |
| 27 | AK058 | 1 | Shuttle Sleeve Assembly | | Ceramic, PTFE |
| 28 | AK205 | 1 | Muffler Assembly | 1 & 2 | PP |
| 29 | AK149 | 2 | Suction Plug | | PTFE |
| 30 | AK153 | 2 | Check Port Seal | 2 | PTFE |
| 31 | AK066 | 2 | Suction Seat | | PTFE |
| 32 | 98002334 | 4 | O-Ring | 2 | PTFE |
| 33 | 98001415 | 4 | Check Ball | 2 | PTFE |
| 34 | AK068 | 2 | Suction Check | | PTFE |
| 35 | AK026 | 2 | Discharge Check Cage | | PTFE |

4.6 CLEAN-UP

To help remove potentially dangerous chemicals prior to service or shipment, the pump should be flushed with DI water or disassembled and thoroughly cleaned. Allow DI water to flush through the inlet and out the outlet to prevent pressure build up.



CAUTION: When handling pump wear appropriate personal protection gear, including safety glasses.

4.7 DISASSEMBLY

During the life of the pump it will be necessary to perform certain preventative maintenance procedures to ensure its continued high performance. This section and the next (4.8 Assembly) are provided for the user's convenience in disassembly and re-assembly procedures.

- Loosen quick grip nuts on the transfer tubes from the pump base using 13/16" open-end wrench.
- Remove pump assembly from the pump control base.
- Immerse or flush the pump assembly using DI water and a neutralizing agent.
- Install mounting fittings in pump adapter ports and lock body into bench mounting fixture. NOTE: Securely attach mounting fixture to work surface using hardware provided.

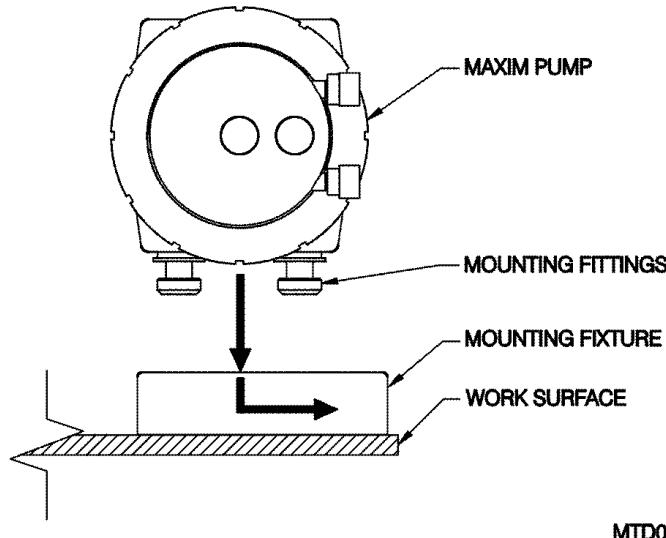


Figure 4-1

- Remove the transfer tubes from pump heads (using latex gloves).
- Using strap wrench, turn union nuts counter-clockwise to remove.

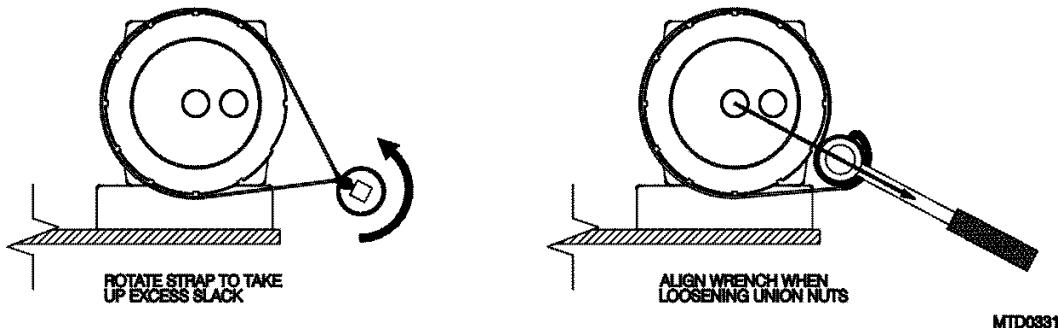


Figure 4-2

- Remove head and check diaphragms for cracks or cuts.

- To remove diaphragms, slit diaphragm with a sharp knife and pull the diaphragms from the grooves. **(Do not pry on diaphragm seal groove, as this will damage the sealing surface.)**
- Unscrew push plate from the shaft in a counter-clockwise direction. Pull other push plate and shaft from pump body.



CAUTION: Following disassembly, parts should be thoroughly washed and be free from chemical residue for handling purposes.

4.7.a Body Disassembly

- Remove suction plugs and seal on bottom of pump body using 1" pin tool.
- Remove suction seat using 1" pin tool.
- Remove ball and O-ring.
- Unscrew suction check using 1" pin tool turning it counter-clockwise.
- Remove second set of O-rings and balls and pull out discharge check cage.
- Remove shaft seals from pump shaft seal groove in the center of the shaft bore using the tip of a razor knife. Take care not to damage the shaft bore.
NOTE: Do not reuse seals.
- Remove damper plug and seal using 3/4" pin tool.

4.7.b Head Disassembly

- Unscrew and remove pilot cap using the 3/4" pin tool
- Remove seal and pilot poppet.
- Unscrew and remove pilot seat using 3/4" pilot pin tool.

4.7.c Control Base Disassembly

- Unlock control base from quick-change mount by pulling out lever on front of base to unlock mount. Then slide base back until it stops. Lift base off mount.
- Using pH test strips evaluate whether base has any contamination in air passages especially the muffler area. If present, neutralize using best methods prior to disassembly.
- Unscrew and remove muffler assembly from base using the 1"pin tool.
- Unscrew and remove the shuttle cap and seal.
- Remove spool assembly from detent adapter.
- Remove detent legs and detent ring from spool.
- Unscrew detent adapter from base using 3/4" pin tool.
- **Do not remove** the shuttle sleeve from the shuttle bore.

4.7.d Cleaning

- Gently spray clean or dunk rinse all components with DI water to remove any trace materials remaining after disassembly.

4.8 ASSEMBLY

Prior to beginning assembly, inspect all parts to ensure they are clean and dry. Wear clean protective gloves. Precautions should be exercised to prevent contaminating any of the air chamber surfaced with chemicals during handling.

4.8.a Control Base Assembly

- Thread detent adapter into shuttle bore using 3/4" pin tool. (Detent adapter must be flush against base as shown.) torque to 45in-lbs.

Shuttle spool assembly instructions:

- Hold shuttle spool (item 1) upright and align slot and in detent legs (item 2) with notch on shuttle spool, see Fig. 1.
- Apply pressure upward onto base of detent legs with thumb and index finger, as shown in Fig. 2.
- Tilt the detent ring (item 3) over one of the legs, and align the groove on the inside of the detent ring with the end of the detent leg. Tilt the other side of the ring down, expanding it slightly, so that the other detent leg snaps into the detent ring groove. See Fig. 3. The completed assembly should look like Fig. 4 (see Figure 4-3).

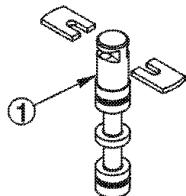


FIG. 1

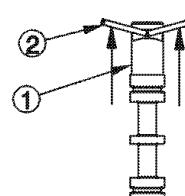


FIG. 2

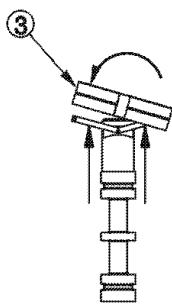


FIG. 3

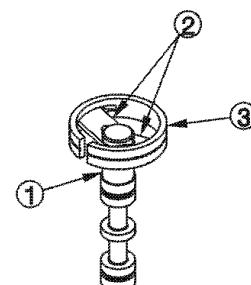


FIG. 4

MTD0312

Figure 4-3

- Insert spool assembly into detent adapter and shuttle sleeve (Do not lubricate spool or sleeve).
- Install seal onto seal groove shoulder of shuttle cap.

- Thread shuttle cap onto detent adapter, torque to 40in-lbs. hand tight.

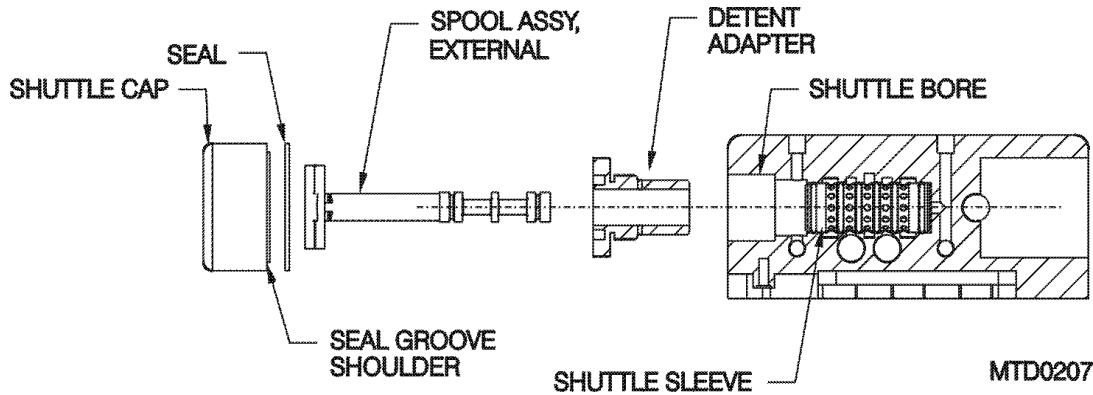



Figure 4-4

ATTENTION: Threads should be snug. Do not over tighten.

- Thread muffler assembly into base using 1" pin tool, torque to 40in-lbs.

4.8.b Body Assembly

- Install seal and damper plug into body using 3/4" pin tool, torque to 50in-lbs.
- Remove pump from assembly fixture.
- Turn pump upside down to access check bores.
- Install discharge check cage into bore making sure small end fits into relief in bottom of bore.
- Drop ball into check cage, then O-ring.
- Install suction sleeve into the bore; tighten using 1" pin tool. Tighten until engagement with O-ring is achieved, then unthread the sleeve a quarter turn. **Do not** over tighten as damage may occur.
- Install second ball into check cage, then O-ring.
- Install suction seat using the 1" pin tool. Tighten until engagement with O-ring is achieved, then unthread the seat a quarter turn.
- Install check seal onto check bore shoulder and thread suction plug into bore using 1" pin tool, torque to 60in-lbs.
- Repeat for the second bore.
- Install two shaft seals in shaft bore groove with slits 180° apart.
- Thread push plate onto main shaft until engagement with the shaft shoulder is achieved. Additionally apply a $\frac{1}{4}$ " turn to ensure proper installation.
- Thread shaft onto shaft insert tool and insert shaft into bore.

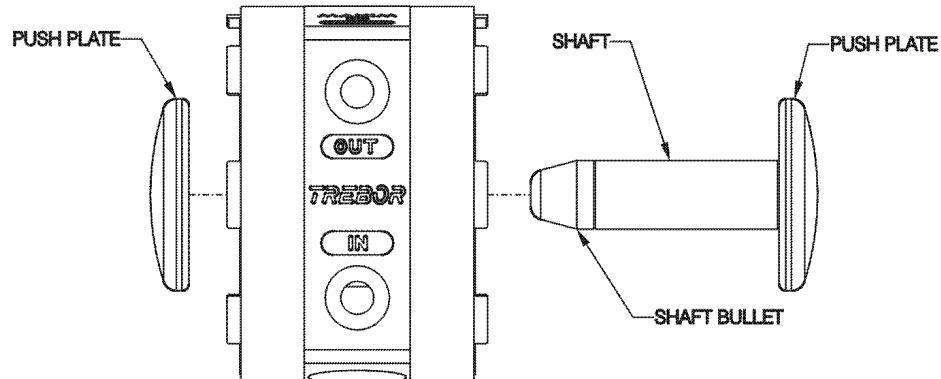

MTD0351

Figure 4-5

- Remove shaft insert tool and thread second push plate until engagement with the shaft shoulder is achieved. Additionally apply a $\frac{1}{4}$ " turn to ensure proper installation.

4.8.c Final Assembly

- Reattach pump to assembly fixture.
- Attach union nut to one side of pump body (hand tight). Do not install diaphragm on this step. This will protect body during initial pump assembly.
- Remove pump from the assembly fixture.
- Place pump body with union nut down and place two diaphragms, removing all air from between diaphragms, with "V" groove point toward the body.
- Install head on body. Note tab alignment and orientation of transfer tube ports in head.
- Install union nut on pump while gently pressing down on the head to engage tabs in head and body, spin union nut down hand tight.
- Turn pump over and remove union nut to install diaphragms.
- Repeat diaphragm, head and union installation.
- Lock body into mounting fixture.
- Using the strap wrench (T0129), torque union nuts slowly to 112 ft-lb with the torque wrench (98003108) at $90^\circ \pm 15^\circ$ to the nut's surface as shown. (Torque includes strap wrench offset.) Torque range 108 to 134 ft-lb.
- If using the optional T0203 M50 Union Nut Socket Tool, the torque is 140 ft-lb with a range of 125 to 155 ft-lb.

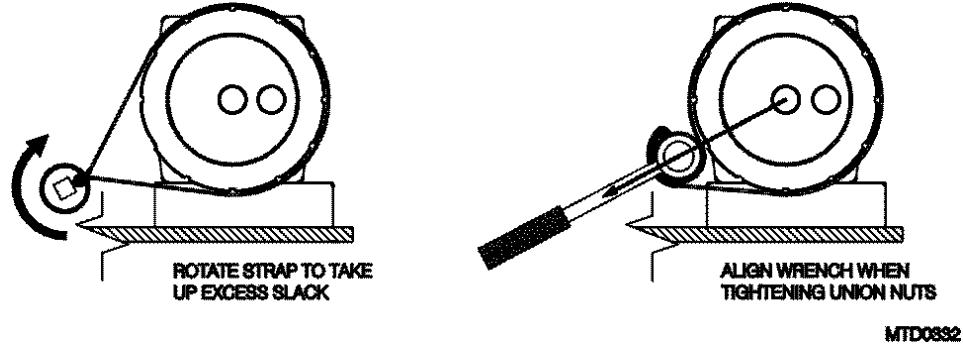


Figure 4-6

- Wrap each transfer tube with 3 wraps of Teflon tape and reinstall into the head ports using latex gloves for added grip. Leave a protrusion height of 2" for each transfer tube.
- Thread pilot seat into head using 3/4" pilot centering pin tool, torque to 15in-lbs.
- Install pilot poppet into pilot seat.
- Position pilot cap seal into bore and thread in pilot cap using 3/4" pin tool, torque to 40in-lbs.
- Position control base on mounting base, slide base forward, use locking lever to secure.
- Ensure that the ferrule of the quick grip nut is inserted into the transfer tube port of the base. Place the gripper seal on top of the ferrule with the tapered end facing up.
- Loosely attach quick grip nuts to transfer tube ports on control base taking care not to dislocate the ferrule and gripper seal.
- Install pump onto control base by inserting transfer tubes in pump into quick grip nuts on control base.
- To secure pump to control base, tighten quick grip nuts one (1) full turn past hand tight using 13/16" wrench.
- Reconnect both air supply and fluid lines.

4.9 TESTING

4.9.a Performance Test

- With the air supply at 0 psi open the air supply valve
- Increase the air pressure until the pump starts to cycle
- Record the start pressure, Target = <20psig
- Pump must prime once even cycling is achieved
- Increase pressure to 60 psi
- Check for fluid leaks, listen for air leaks, check for irregularity
- Prepare the pump for drying

4.9.b Dry Pump

- Connect vacuum hose to discharge line
- Connect purge line to fluid inlet
- 60 psig Supply Pressure
- Cycle pump & vacuum dry by rotating pump side to side for 30 seconds.
- Turn off Air Supply and allow the pump to purge for 5 minutes.

4.9.c Dry Suction

- 20 psig Supply Pressure Target
- Record Suction Value
- Target = 12 in-Hg.

5 TROUBLESHOOTING

Pump Will Not Start, Fails to Operate

| <u>Cause:</u> | <u>Solution:</u> |
|---|---|
| Insufficient air pressure. | Must be minimum 20 psig at pump air hook-up. |
| Insufficient air volume (low supply pressure during running). | See Performance Charts (3.1) for requirements. Check for both regulator and control valve capabilities. |
| Fluid discharge line blocked. | Remove obstruction. |
| Downstream valve closed, filter plugged or other obstruction. | |
| Pilot valve failure. | Inspect and replace pilot valve body and poppet. |
| Detent failure. | Inspect detent legs for worn or damaged parts. |

Bubbles in Fluid Discharge

| <u>Cause:</u> | <u>Solution:</u> |
|--|---|
| Leaking fluid inlet fitting. | Replace adapter seal. |
| Leaking main seal. | Tighten union nut to 75 ft-lbs. or replace diaphragms, and check head and body seal grooves for nicks or scratches. |
| Pump inlet line pressure reached saturation point (due to high suction requirement). | Increase diameter of suction supply line (reduces restriction). |
| Ruptured (perforated) diaphragm. | Reduce output flow. |
| Check bore caps leaking. | Replace diaphragms. |
| | Tighten check bore caps or replace seals. |

Fluid Leaks

| <u>Cause:</u> | <u>Solution:</u> |
|---|---|
| Union nut torque not enough to effect seal. | Tighten union nuts to 75 ft-lbs. |
| Leaking main seal. | Replace diaphragms. |
| Check bore cap. | Check head and body seal grooves for nicks or scratches. |
| Ruptured diaphragm(s) can result in fluid leaks through air exhaust port. | Tighten, or remove and replace seal. |
| | Replace diaphragms, and any parts that may have been damaged by fluid exposure. |

Erratic Cycling

| <u>Cause:</u> | <u>Solution:</u> |
|--|--|
| Pilot valve failure. | Inspect and replace pilot valve body and poppet. |
| Suction line restricted (cavitation). | Reduce fluid restriction. |
| Detent failure. | Inspect and replace spool assembly. |
| Check ball(s) not seating. | Check O-rings for damage; replace if necessary. |
| Over pressurization of pump discharge. | Make sure check balls move freely in sleeves. |
| | Reduce discharge pressure by removing restriction. |

6 WARRANTY



See the Trebor Standard Limited Warranty at

www.idex-hs.com/support/trebor/downloads/TreborStandardLimitedWarranty_02-07.pdf

7 CONTACT INFORMATION

7.1 GENERAL CONTACT INFORMATION

Web: www.treborintl.com
Phone Number: (801) 561-0303
Toll Free Number: (800) 669-1303
Fax Number: (801) 255-2312
Email: treborinfo@idexcorp.com
treborsales@idexcorp.com
Address: Trebor International
8100 South 1300 West
West Jordan, Utah 84088 U.S.A.

7.2 TECHNICAL SUPPORT

Email: treborservice@idexcorp.com
Phone Number: (801) 244-6156

7.3 REGIONAL REPRESENTATIVES

Web: www.treborintl.com